

Nokia

5500

5530 XpressMusic

5800 XpressMusic

5800-2 NAM XpressMusic

6110 Navigator

6120 Classic

6210 Navigator

6220 classic ★

E50

E51

E60

E61

E61i (Mocha)

E65

E66 (Dora)

E66-2 (Dora)

E66-3 (Dora)

E71

E75

E90 Communicator

N73

N78

N79

N80

N81

N81 8GB

N82

N85

N86

N95

N95-2 8GB

N95-3 NAM

N96 16GB

N97



iPAQ 610c / 612c / 614c

iPAQ 6915

iPaq HW6510



Dream

HD2

Hero

Imagio

Magic

Max 4G
Mega
P3300
P3600
P3600i
S310
S620 / S621
S710 / S711
S730
S740
Tilt 2
Touch (P3450)
Touch (P3452)
Touch 3G
Touch Cruise (P3650)
Touch Diamond (P3700)
Touch Diamond2
Touch Dual P5500
Touch Find
Touch HD (Blackstone)
Touch Pro
Touch Pro CDMA
Touch Pro2
Touch2 (P3333)
TyTN II (P4550)
X7500 Advantage



i8910 Omnia HD
SCH-i600 HSDPA
SGH-i200
SGH-i550
SGH-i550w
SGH-i560 / SGH-i560v
SGH-i607 BlackJack
SGH-i760
SGH-i780
SGH-i8510 16GB
SGH-i8510 8GB
SGH-i900 Omnia 16GB
SGH-i900 Omnia 8GB
SGH-i900L
SGH-i908 Omnia 16GB
SGH-i910 Omnia 8GB

Sony Ericsson

Satio
Xperia X1 / X1i / X1c

Others

Tréo Pro

Acer F1

Asus MyPal A696, P750

AT&T Tilt 8900, Tilt 8925

Dell Axim X30 Advanced, Axim X30 Basic, Axim X30i, Axim X51v

Dopod C500, C720W, C730, CHT 9100, CHT 9110, D810, P800, P800W, P860, S600

Dopod,310,Windows Axim X51v

E-TEN Glofiish M800, Glofiish M810, Glofiish X800, InfoTouch X500+

Emobile Emonster S11HT

I-Mate SPL, Ultimate 8502, Ultimate 9502

LG GM730, KE850, KS10, KS20, KT610

MiTAC Mio P350 Digi-Walker, Mio P360 DigiWalker, Mio P550 Digi-Walker, Mio

P550m Digi-Walker

MWg Atom V, Zinc II

O2 Xda Atmos, Xda Cosmo, XDA Orbit, Xda Orbit 2, XDA Serra, Xda Star , Xda Stellar

Qtek G200

Qtek,9090,Windows Tréo Pro

SFR S300+, S710, Touch Cruise, Touch Dual, v1615

Toshiba Portégé G710, Portégé G810

UBiQUiO,501,Windows Portégé G810